



Spills soak through ordinary carpet onto subfloor

SpillBarrier™ keeps spills on top




SpillBarrier™

SpillBarrier™ moisture barrier backing isolates spills above the surface for fast, effective cleanup.

features

- **Environmentally Friendly** — Cushion contains 18% post-consumer recycled content.
- **Moisture Resistant** — Inhibits recurring spots and odors due to wicking.
- **Ideal for Heavy Wheeled Traffic** — Engineered for optimum roller mobility due to its low profile and high compression resistance.
- **Reaction Bonded** — Cushion is chemically welded to the back of the carpet to prevent buckling and delamination.
- **Trouble-Free Installation** —
 - Consistent gauge thickness aides in matching seams
 - Compatible with both permanent and release adhesive systems
 - Dimensionally stable and stretchable
 - Resists buckling, curling and shrinking

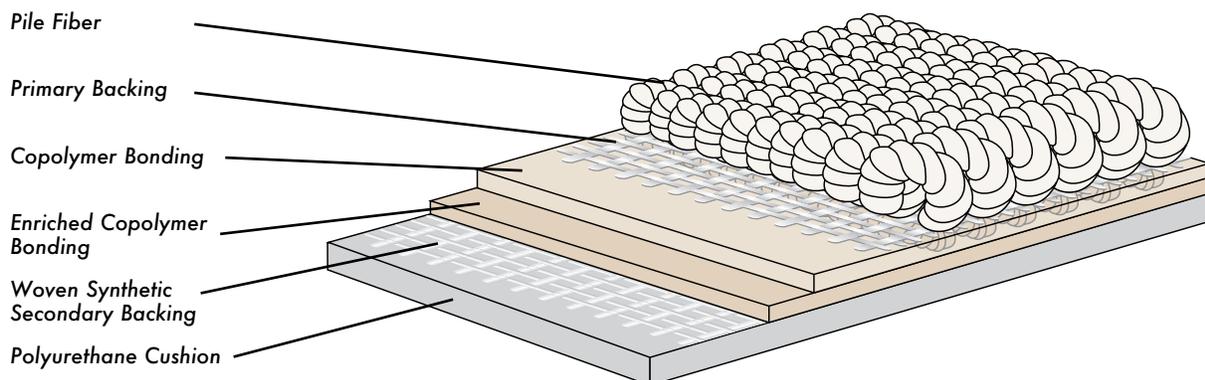

SpillBarrier™

recommended

for areas with heavy traffic and where liquid spills may occur

- Healthcare
- Food services
- Lobbies
- Corridors
- Banks
- Retail stores
- Hotels
- Casinos
- Schools
- Offices

specifications and warranties

Backing construction (12 feet wide)

- Dual copolymer bonding + 2 woven interliners
- Polyurethane cushion

Cushion

Recycled Content:

- SpillBarrier™ system is 24 ounces per square yard, of which 14% is recycled content
- 100% of the recycled content is post-consumer material

Thickness:

- ≈3/32 inch

Density:

- 24 lbs. per cubic foot

Backing warranties

- Lifetime ZipperLock® warranties available on selected styles. See full text for details.



simple installation

- Premium multi-purpose or releasable adhesive is recommended.
- Dry fit the pre-cut carpet into the room, centering the carpet and allowing the surplus to lap against the walls evenly. Make sure there is enough carpet to reach to the center of thresholds in doorways and match pattern.
- When seams are necessary, they should be cut first. Row cut the edges removing a minimum 1 inch of foam from the factory edge. Do not double cut seams. Row cutting from the face is recommended with sharp cutting tools. Cut each seam edge separately.
- After seams are matched, make sure the pattern and nap are aligned. Then, fold the carpet back at the seam areas. Do not compress the seam. Seam cuts should all be net cuts.
- Apply adhesive to floor using a short notched trowel. Follow adhesive label instructions relating to open time.
- Secure the seams in accordance with CRI standard 104.

***Specifications are subject to normal manufacturing tolerances**